


Manual – tempmate® -S1

Single-Use USB Data Logger

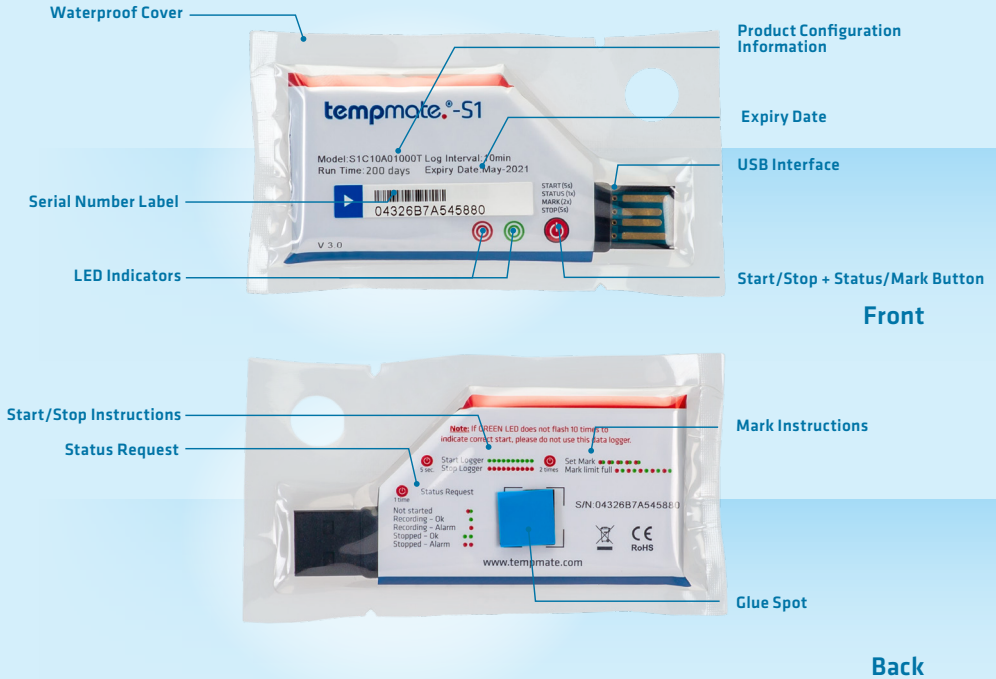

Product Overview

This document describes the correct handling process for **tempmate®-S1** data loggers, for the purpose to ensure the proper operation and provide a reliable temperature and time record during transportation and storage.

| ❖ Technical Specifications | | Weight | 15.2 g |
|--|---|-------------------------------|---|
| Recording Options | Single-Use | Dimensions | 88 mm × 47 mm × 8 mm (L × W × H) |
| Temperature Range | -30 °C to 70 °C | Certifications | According to EN 12830, according to FCC and CE, RoHS |
| Temperature Accuracy | ±0.2°C (0°C/+60°C); ±0.5°C (others) | Validation Certificate | PDF file in memory and online database |
| Temperature Resolution | 0.1 °C | Software | PDF or CSV program Optional: Cloud Ready with the tempmate.®-Cloud |
| Data Storage Capacity | 31.200 readings | Report Generation | Automatic PDF & CSV report |
| Shelf Life / Battery | 2 years ¹ / CR2450 button cell | Connection Interface | USB 2.0, A-Type |
| Recording Interval | 10 minutes (standard) | Alarm Configuration | Optional, up to 6 points |
| Recording Duration | 200 days | | |
| Startup Mode | Button or preprogrammed scheduled start | | |
| Stop Mode | Button or preprogrammed scheduled start | | |
| Protection Class | IP67 / NEMA 6 | | |

¹ Depending on optimal storage conditions (+15°C to +23°C / 45% to 75% rh)

Manual – tempmate® -S1

Single-Use USB Data Logger

Operation Instructions



Press button

- 01** Press and hold for at least 5 seconds to start recording. If the **GREEN LED** flashes 10 times, the start was successful.
 Note: If the **GREEN LED** does not flash 10 times to indicate a correct start or **RED LED** flashes 3 times, DO NOT use this logger.



Status Request or Set Mark (optional)

- 02** Press button once at any time to check current status of the logger. Double-click button to set a mark in the report. See details of these optional features in tables below.



Press button

- 03** Keep button pressed for minimum 5 seconds to stop recording. Then **RED LED** flashes 10 times, which indicates a successful stopping.
 Note: For safety issues the logger is not stoppable in the first 30min. after the start.



Tear off

- 04** After stopping record, tear off the transparent plastic cover and connect the logger to a USB port of the computer. The PDF and CSV report will be generated automatically and can be found in the device's „tempmate“ folder.

Start / Stop

| Status | Action | LED confirmation |
|-----------------|-----------------------|--|
| Start Logger | Push button for 5 sec | GREEN LED flashes 10 times |
| Set Mark | double-click button | RED LED + GREEN LED flashes 5 times simultaneously |
| Mark limit full | double-click button | RED LED + GREEN LED flashes 5 times alternating |
| Stop Logger | Push button for 5 sec | RED LED flashes 10 times |

Status Request by pushing Button once

| Status | Action | LED confirmation |
|-------------------|------------------|---|
| Not Started | push button once | RED LED + GREEN LED flashes 1 time |
| Recording – OK | push button once | GREEN LED flashes 1 time |
| Recording – Alarm | push button once | RED LED flashes 1 time |
| Stopped – OK | push button once | GREEN LED flashes 2 times |
| Stopped – Alarm | push button once | RED LED flashes 2 times |
| Low Battery | push button once | RED LED flashes 3 times |
| Scheduled Start | push button once | RED LED + GREEN LED flashes 2 times alternately |

Manual – tempmate.® -S1

Single-Use USB Data Logger

Certificate of Validation

The certificate of validation is available online for each logger. Follow the steps below to access your logger's certificate and retrieve all related documents.

- 1 Hold the **tempmate.®-S1** logger to the back of your phone
- 2 The NFC function opens the **tempmate.®** certificate database
- 3 You automatically get access to the validation certificate of your **tempmate.®-S1** logger and all related documents



- 1 Open your browser and go to the following page:
<https://www.tempmate.com/database/>
- 2 Alternatively you can scan this QR-Code to get to the mentioned page.
- 3 Enter the serial number of your **tempmate.®-S1** in the search bar and press the ENTER button
- 4 You automatically get access to the validation certificate of your **tempmate.®** logger

Notes

- 1 When **tempmate.®-S1** logger is stopped and connected to the computer the first time, both LEDs are flashing to indicate the PDF report is in process of generation. At this time, please do not unplug the logger until both LEDs are on, which indicates the finished PDF generation.
- 2 A stopped **tempmate.®-S1** logger cannot be started again.
- 3 Do not place **tempmate.®-S1** logger into corrosive liquid.
- 4 The battery of **tempmate.®-S1** loggers is a non-exchangeable CR2450 lithium battery. Please do not expose to direct heat. Do not place in microwave.
- 5 Store **tempmate.®-S1** loggers under room temperature conditions and do not use it after the expiry date printed on the logger.
- 6 Please recycle or dispose **tempmate.®-S1** loggers in accordance with local laws and regulations.
- 7 Hold the logger against the back of your phone to access the validation certificate of your **tempmate.®-S1** and all associated documents via the NFC function.